



LE-616

FM	•	87	•	91	•	95	•	101	•	106	•	108	•	MHz
AM	•	530	•	750	•	1000	•	1400	•	1600	•	KHz		
SCALE	0	1	2	3	4	5	6	7	8	9	10	SCALE		
SW1	•	5.60	•	5.70	•	6.00	•	6.30	•	6.40	•	MHz		
SW2	•	6.80	•	7.00	•	7.20	•	7.50	•	7.60	•	MHz		
SW3	•	9.20	•	9.30	•	9.50	•	9.80	•	10.0	•	MHz		
SW4	•	11.5	•	11.6	•	11.8	•	12.0	•	12.2	•	MHz		
SW5	•	13.4	•	13.6	•	13.9	•	14.1	•	14.2	•	MHz		
SW6	•	15.0	•	15.2	•	15.5	•	15.8	•	15.9	•	MHz		
SW7	•	17.1	•	17.3	•	17.6	•	17.8	•	18.0	•	MHz		

X-BASS

LELONG

⏪

⏩

⏮

EQ

CD

MODE

MIN
OFF

VOLUME

MAX

LE-616

FM • 87 • 91 • 95 • 101 • 106 • 108 • MHz

AM • 530 • 550 • 1000 • 1400 • 1600 • KHz

SCALE 0 1 2 3 4 5 6 7 8 9 10

SW1 • 5.60 • 5.70 • 6.00 • 6.30 • 6.40 • MHz

SW2 • 6.80 • 7.00 • 7.20 • 7.50 • 7.60 • MHz

SW3 • 9.20 • 9.30 • 9.50 • 9.80 • 10.0 • MHz

SW4 • 11.5 • 11.6 • 11.8 • 12.0 • 12.2 • MHz

SW5 • 13.4 • 13.6 • 13.9 • 14.1 • 14.2 • MHz

SW6 • 15.0 • 15.2 • 15.5 • 15.8 • 15.9 • MHz

SW7 • 17.1 • 17.3 • 17.6 • 17.8 • 18.0 • MHz

